
STILL LOCKED TO SWITCH, DEPRESS AND CONTINUE TO ROTATE TO REMOVE KNOB ANTICLOCKWISE TO OFF POSITION. THE KNOB IS

ANTICLOCKWISE UNTIL
THE STOP IS REACHED. KNOB CAN NOW BE REMOVED.
THIS LOCK POSITION IS USED TO KEEP KNOB IN PLACE WHEN SWITCH IS N THE OFF POSITION.

TO REPLACE PLACE KNOB TO THE PFF KNOB IN SWITCH HOUSING, DEPRESS AND TURN CLOCKWISE 45° POSITION,

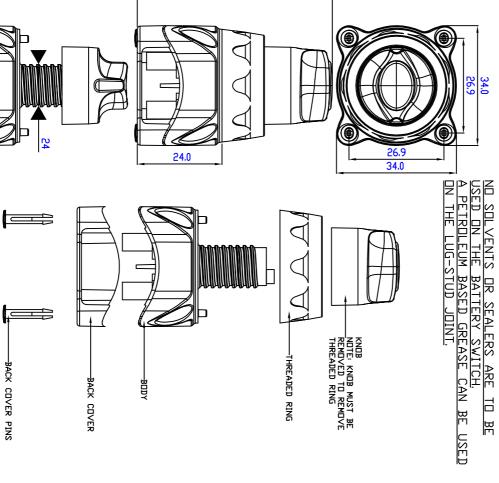

55.2

STILL LOCKED TO SWITCH, DEPRESS AND CONTINUE TO REMOVE KNOB ANTICLOCKWISE TO OFF POSITION, THE KNOB IS

TO ROTATE

ANTICLOCKWISE UNTIL THE STOP IS REACHED, KNOB CAN NOW BE REMOVED, THIS LOCK POSITION IS USED TO KEEP KNOB IN PLACE WHEN SWITCH IS N THE OFF POSITION

PLACE KNOB IN SWITCH HOUSING, DEPRESS AND TURN CLOCKWISE 45° TO THE OFF POSITION, TO REPLACE KNOB

